

# ASSEMBLY INSTRUCTION

## Pail Carry

**S-200 ITEM No. 855470**


### 1. Contents of Package

This product includes the following parts. Please make sure no damage during shipment and no missing accessories after unpacking as soon as possible.


<p>(1) Pipe A</p> <p>Carry Assembly mounting hole</p> <p>Spare hole</p> <p>Tank holder Assembly mounting hole</p> <p>Pipe B mounting hole</p> <p>1 piece</p>	<p>(2) Pipe B</p> <p>1 piece</p>	<p>(3) Bolt M8×40</p> <p>1 piece</p>	
<p>(4) Tank holder Assembly</p> <p>1 piece</p>	<p>(5) Carry Assembly</p> <p>Hook</p> <p>1 piece</p>	<p>(6) U Bolt</p> <p>1 piece</p>	<p>(7) Plain washer M8</p> <p>4 piece</p>
<p>(8) Spring washer M6</p> <p>2 pieces</p>	<p>(9) Spring washer M8</p> <p>3 pieces</p>	<p>(10) Nut M8</p> <p>3 pieces</p>	<p>(11) Wing Nut M6</p> <p>2 pieces</p>

## 2. Assembly Procedures

- 1) Insert (2) Pipe B into (1) Pipe A, and adjust the positions of the holes. Refer to the picture on the right for how to insert the pipe.

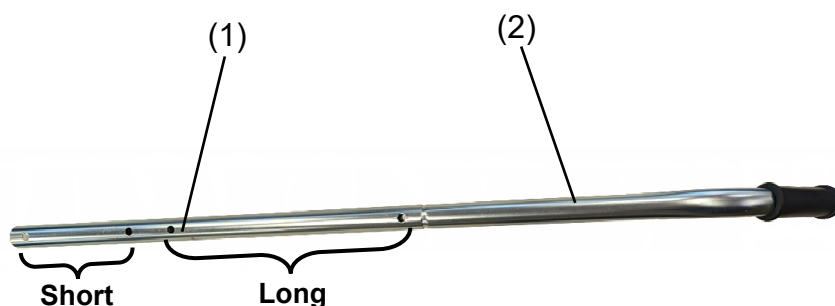

- 2) Tighten the (3) bolt, the (7) plain washer, (9) spring washer and (10) nut and fix them.

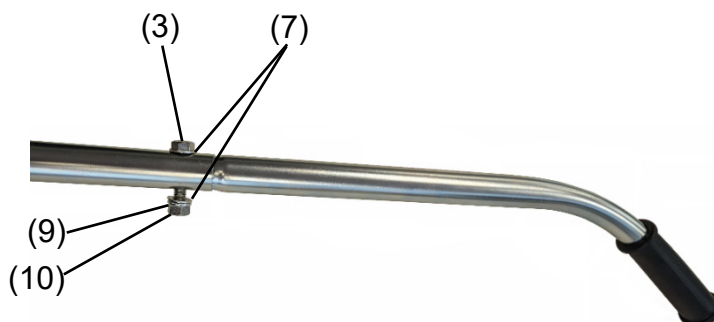


- 3) Insert the screws on the (4) tank holder Assembly and (5) carry assembly into the screw holes on (1) Pipe A, and fix them with the (7) plain washers, (9) spring washers and (10) nuts.



## 3. How to Use

- 1) Put the bottom of the pail on the hook of (5) Carry Assembly.
- 2) Fix the pail by putting the screws of the (6) U Bolt through the holes on the (4) tank holder assembly and tightening the (8) spring washers and the (11) wing nuts.

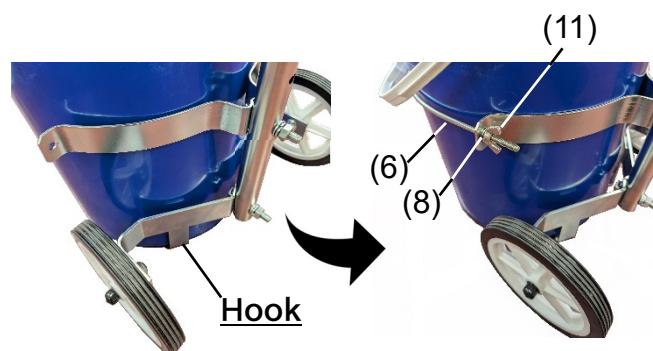

## YAMADA CORPORATION

INTERNATIONAL DEPARTMENT  
1-1-3, Minami-Magome, Ota ku, Tokyo, 143-8504, Japan  
PHONE : +81-(0)3-3777-0241  
FAX : +81-(0)3-3777-0584  
E-mail : intl@yamadacorp.co.jp  
Web : www.yamadacorp.co.jp

## YAMADA (THAILAND) CO., LTD

41/79 Moo 6, Bangcha-long, Bangplee, Sumutprakarn 10540, Thailand  
PHONE : +66-(0)2-130-0990  
FAX : +66-(0)2-130-0993  
E-mail : sales@yamada-th.com